



Lite Damper


INSTALL GUIDE



Scan to unlock
your free warranty


Or — on your phone?
Press + hold the QR code to
go straight there.

1

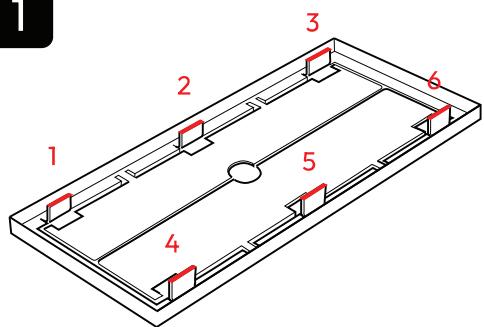


Position **Lite Damper** face down.
Locate protruding **6 prongs**.

2

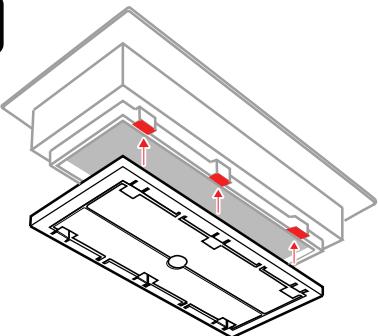


Align the **Lite Damper prongs** with
vent. Apply pressure to secure.
Listen for snapping sound.

3

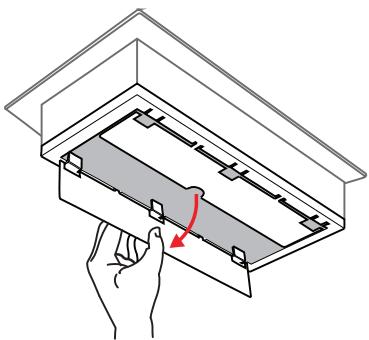

Pull **damper wings** out to
maximize airflow.

4

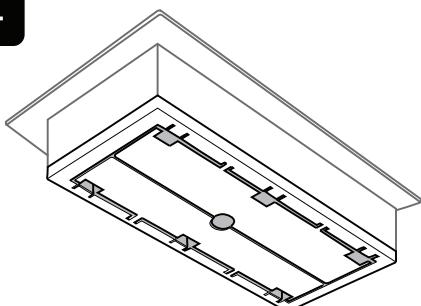

Push **damper wings** in to
restrict airflow.