




Brack Kit [Luxe]

INSTALL GUIDE




Scan to unlock
your free warranty


Or — on your phone?
Press + hold the QR code to
go straight there.

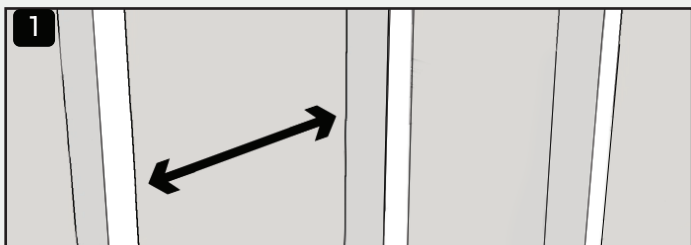


Recommended span between brackets is 16" on center. Span will vary with application. Each pair of brackets is rated to hold up to 300 lbs.

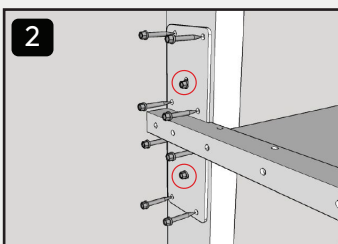


Use long openings to adjust level.

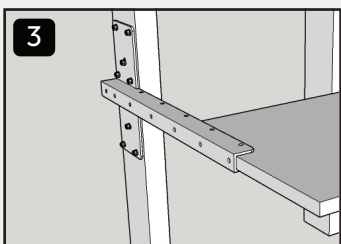

Use provided screws to fasten
plates to substrate.

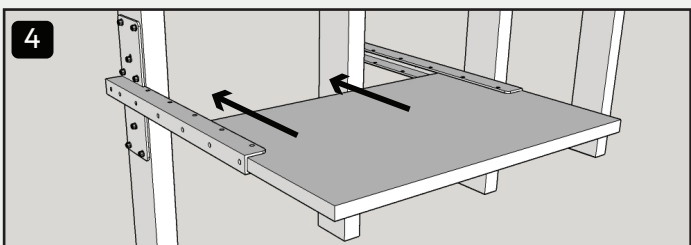


Slide in structural board. Must fit snug with minimal movement.

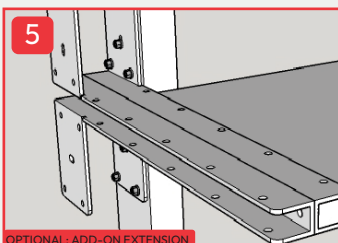


OPTIONAL: ADD-ON EXTENSION

Add a new bracket.

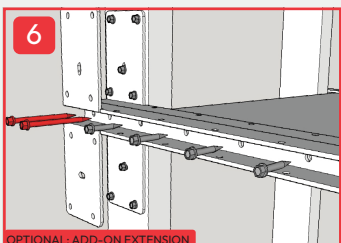

OPTIONAL: ADD-ON EXTENSION

Fasten with provided screws.
2 additional long screws
required (not included).

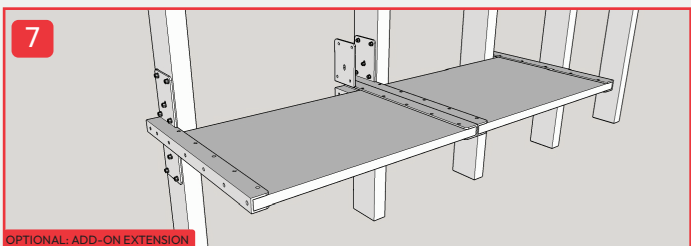

OPTIONAL: ADD-ON EXTENSION

Repeat steps 1 to 3. Continue adding brackets as needed. Clad as desired.