



Scan to unlock your free warranty


Or — on your phone? Press + hold the QR code to go straight there.

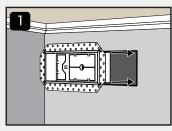

Dry-fit **body** into duct opening.

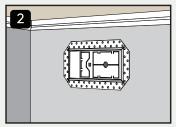


Fasten to drywall. for **Luxe** model (metal) use drywall screws. For **Lite** model (plastic) use staples.

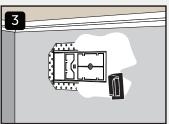


Use mud to cover flange surface. Wait to dry.




Sand so surface transitions smoothly. Repeat steps 3 + 4 as needed.

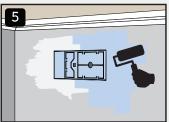


Paint or wallpaper inside of **body** and to match surrounding walls.



Paint or wallpaper the **plate** to match.

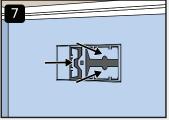

To adjust airflow, remove **plate** and bend dampers. For optimal air flow, push dampers past 90°.

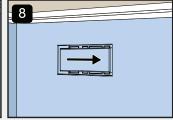

Insert **plate** in place. That's it! Fittes to perfection.

For **Lite** versions of this product, dampers are not included. Optional dampers are sold seperately.