



Flush Drywall Receptacle Mount [Lite] INSTALL GUIDE




Scan to unlock
your free warranty


Or — on your phone?
Press + hold the QR code to
go straight there.

Read this bit first!


Install method is the same for all receptacle types.

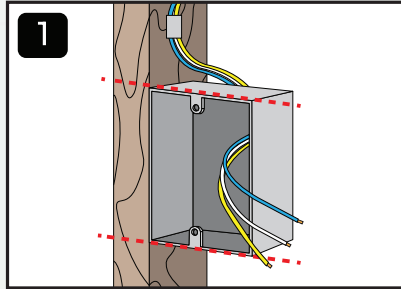


Ensure the receptacle box is installed flush to the studs.

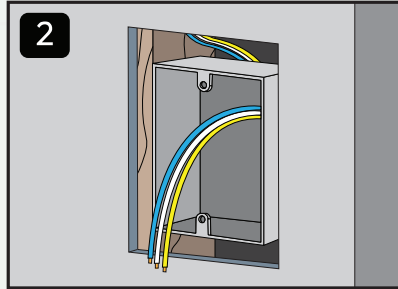


Cut opening in drywall to fit **Flush Drywall Receptacle Mount**.

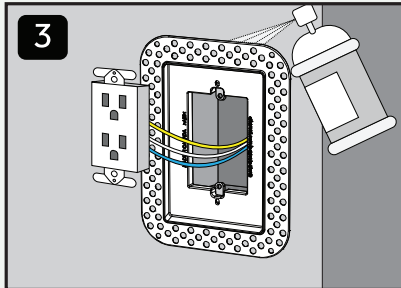


Ensure **flange** is flat to the wall.
Use spray adhesive to fasten
as needed.

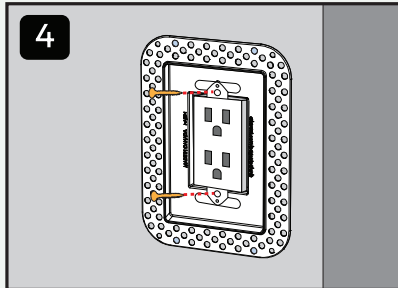

Fasten the outlet to the receptable box through the "T" shaped holes in the **Flush Drywall Receptacle Mount**.

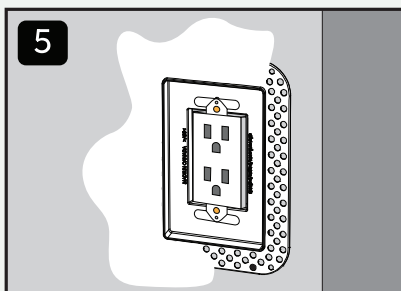


Tape, mud and sand. Repeat
as needed then paint to match
wall colour.

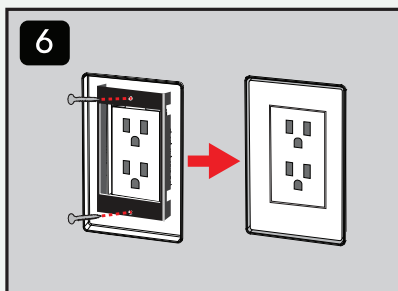

Fasten screwless wall plate frame
and snap on wall plate.



Flush Drywall Receptacle Mount [Luxe] INSTALL GUIDE

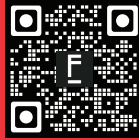


Scan to unlock
your free warranty


Or — on your phone?
Press + hold the QR code to
go straight there.

Read this bit first!


Install method is the same for all receptacle types.

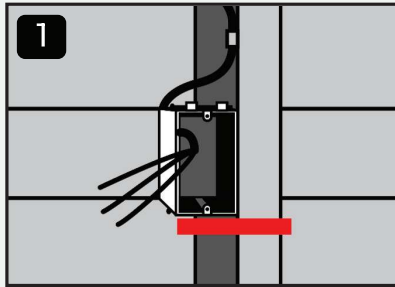


1
Ensure the receptacle box is installed flush to the studs.

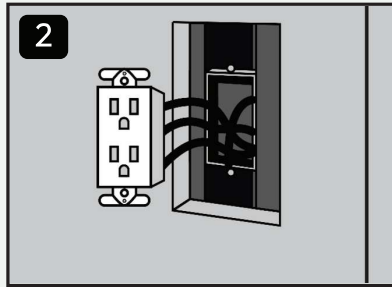


2
Cut opening in drywall to fit **Flush Drywall Receptacle Mount**.

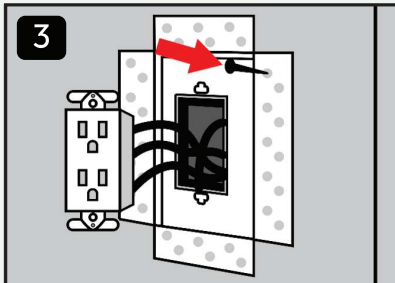


3
Ensure **flange** is flat to the wall.
Use drywall screws to fasten as needed.

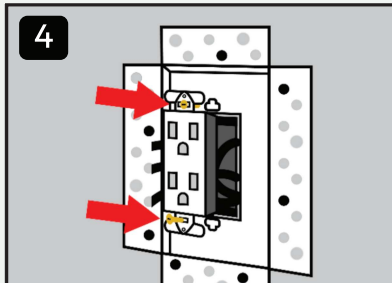

4
Fasten the outlet to the receptacle box through the "T" shaped holes in the Drywall Mount.

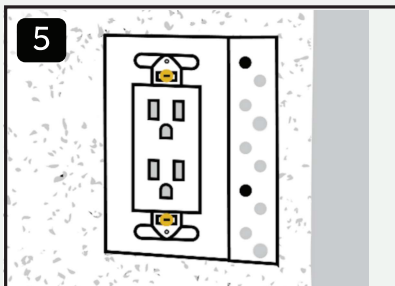

5
Tape, mud to cover **flange**. Once dry, sand. Repeat as needed.

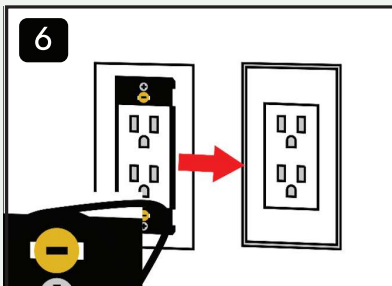

6
Fasten the screwless wall plate frame and snap on wall plate.

Wall plate and wall plate frame not included.