




## Flush No-See Device Mount [Luxe]

### INSTALL GUIDE

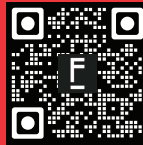


Scan to unlock  
your free warranty


Or — on your phone?  
Press + hold the QR code to  
go straight there.

Read this bit first!


For drywall surface only — do not install in floors!

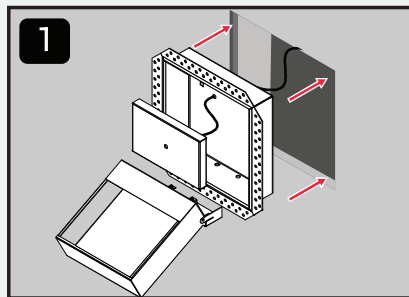


Remove **door** and **mounting plate**.  
Dry fit **body** into place. Ensure  
wiring is run through the hole.

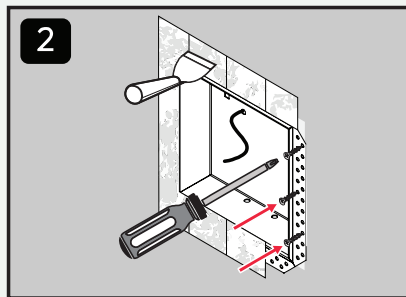


Fasten **body** in place with screws.  
Mud and tape drywall compound  
to cover **flange**.

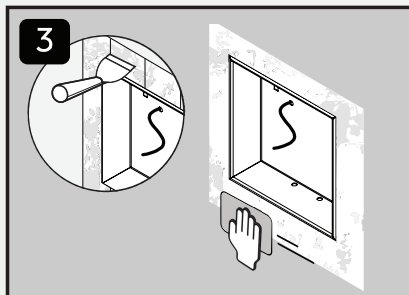


Once dry, sand mud until the surface  
transitions smoothly. Repeat steps  
2 + 3 as needed.

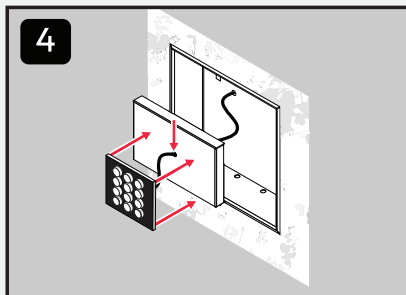

Mount keypad to **mounting plate**.  
Run wire through the hole in the  
center of the **mounting plate**.

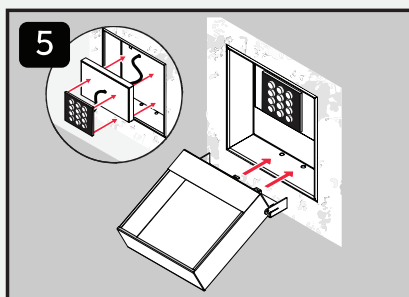

Slide **mounting plate** and **door**  
back into place.

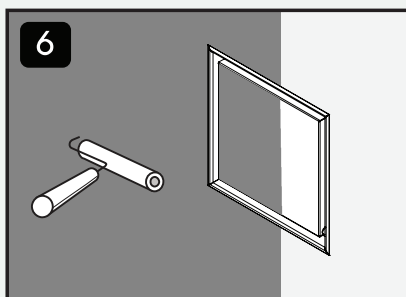

Customize to match surrounding wall.