






Framed Hideaway Hook [Luxe] Installation Guide

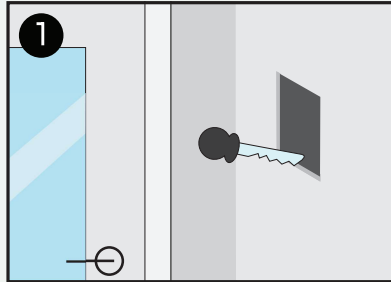


1 Cut a 2 1/16" wide by 3 3/4" tall hole in the mounting surface. ^[1]

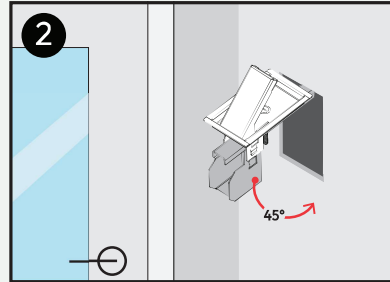


2 Insert at an angle of 45° with the hook held open. The top side of the anchor should be put in first followed by the bottom. ^[2]

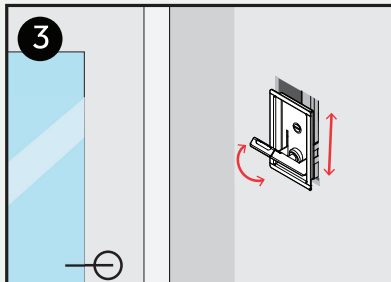


3 Adjust hook into place.

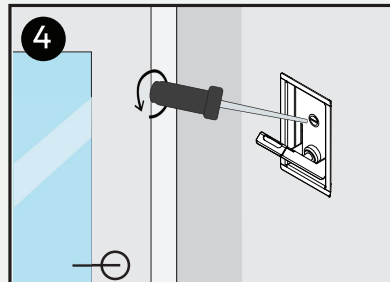

4 Tighten the screw until the hook is held firmly in the wall.

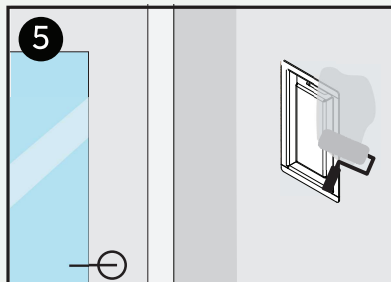

5 Paint to match the wall.
Avoid getting paint on the damper mechanism. This can impede the soft-close function.

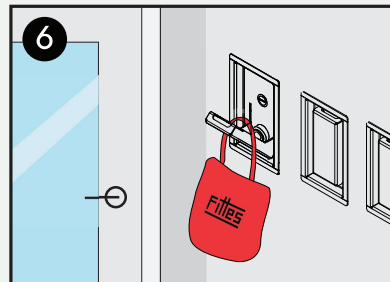

6 Get hanging!

^[1] Mounting surface must be between 1/2" and 3/4" thick.


^[2] There should be no obstructions in the wall that interfere with the hook's counterweight. Any obstruction will impact the self-closing system.

ADDITIONAL SUPPORT
support@fittes.com


PATENT INFORMATION
fittes.com/pages/patents




Made in
North America

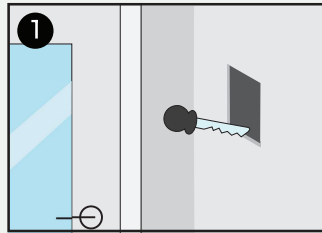


Cut a 2 1/16" wide x 3 3/4" tall opening in drywall.

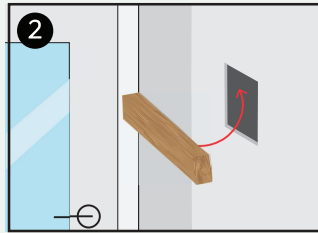


To ensure maximum hook capacity, mount using proper drywall anchors. Alternatively a block of wood within the wall can be used as an anchor to screw into.

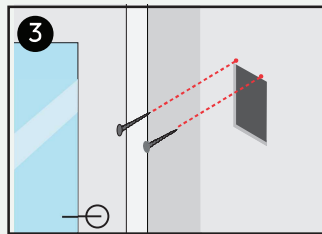


Screw wood backer in place/insert drywall anchors.

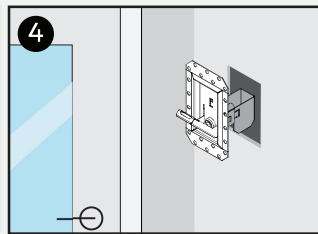


Insert with the hook held open.^[1]

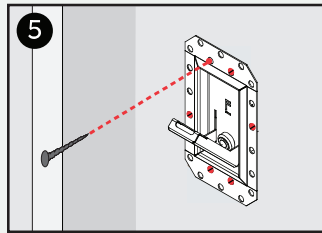


Screw drywall bead to wall using the inner most holes for easier mudding.

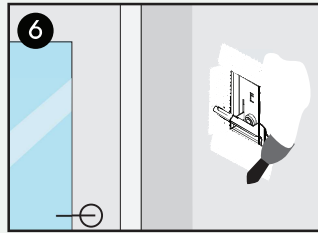

Tape and mud over flange.^[2]
Sand and repeat as needed.

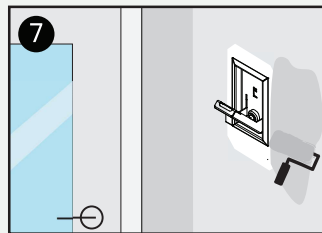

Paint to match the wall.
Avoid getting paint on the damper mechanism. This can impede the soft-close function.

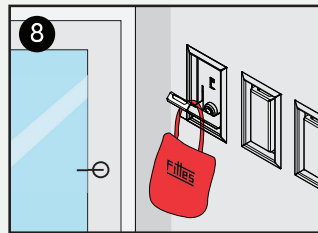

Get hanging!

^[1] There should be no obstructions in the wall that interfere with the hook's counterweight. Any obstruction will impact the self-closing feature.

^[2] Ensure no mud is left in the hook mechanism. This can impact the self-closing system.