




Flush Floor Vent

INSTALL GUIDE




Scan to unlock
your free warranty


Or – on your phone?
Press + hold the QR code to
go straight there.

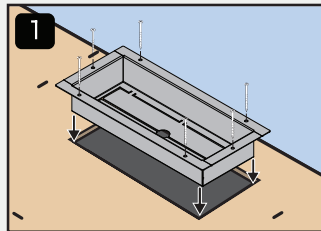


Drop in **base** on subfloor and fasten with wood screws.

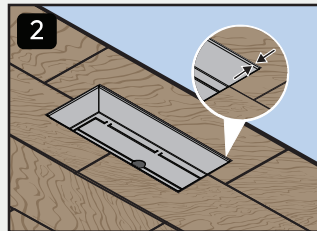


Install surface material on top of **base** so that it's completely flush. Install surface material to be flush with inside edge of **base**.

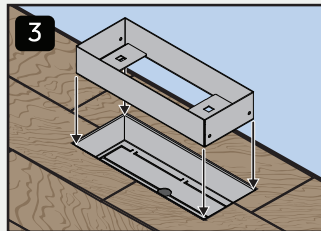


Dry fit **body** into **base**.

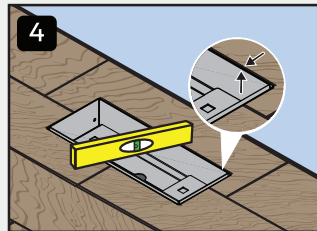


Using dampers bent upwards as supports, adjust **body** up and down until it's flush with the top of surface.

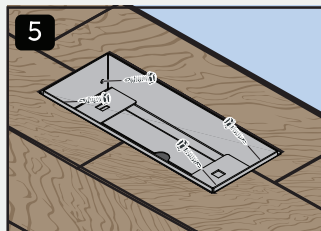


Once adjusted to preferred height, fasten the **body** to the **base** using provided screws through the four pilot holes in each corner.

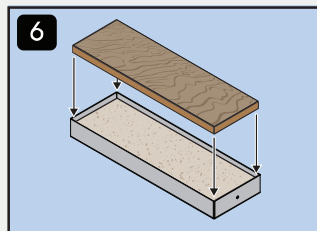

Apply adhesive bonding material in **tray**. Insert flooring material.

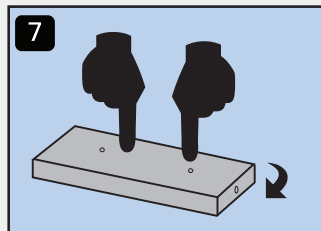

Flip **tray** upside down. Apply even pressure until flooring material lies flat with rim of **tray**.

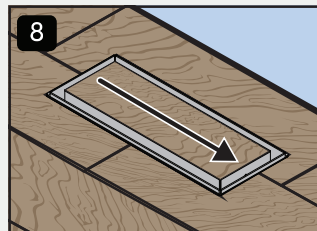

Insert **tray** in place. That's it! Fittes to perfection.

To adjust airflow, remove tray and bend dampers. For optimal air flow, push dampers past 90°.